

How to set IP Address Static – PAX A35

1. Open terminal settings
2. Type in the default PAX password – pax9876@@
3. Tap Ethernet
4. Scroll down to the bottom and tap Ethernet Configuration
5. Select Static IP
6. Save

