

PAX S300 - To disable AMEX card

1. Press [F + 1] together
2. Enter password TODAY's DATE format MMDDYYYY
3. Press [2] for Merchant Settings
4. Press [1] for Authorizations
5. Enter password TODAY's DATE format MMDDYYYY
6. Press [2] for Card Types
7. Press [3] AMEX
8. Press [1] Disabled