


# PureJOIN Inventory Utility Guide



Connect Scanner

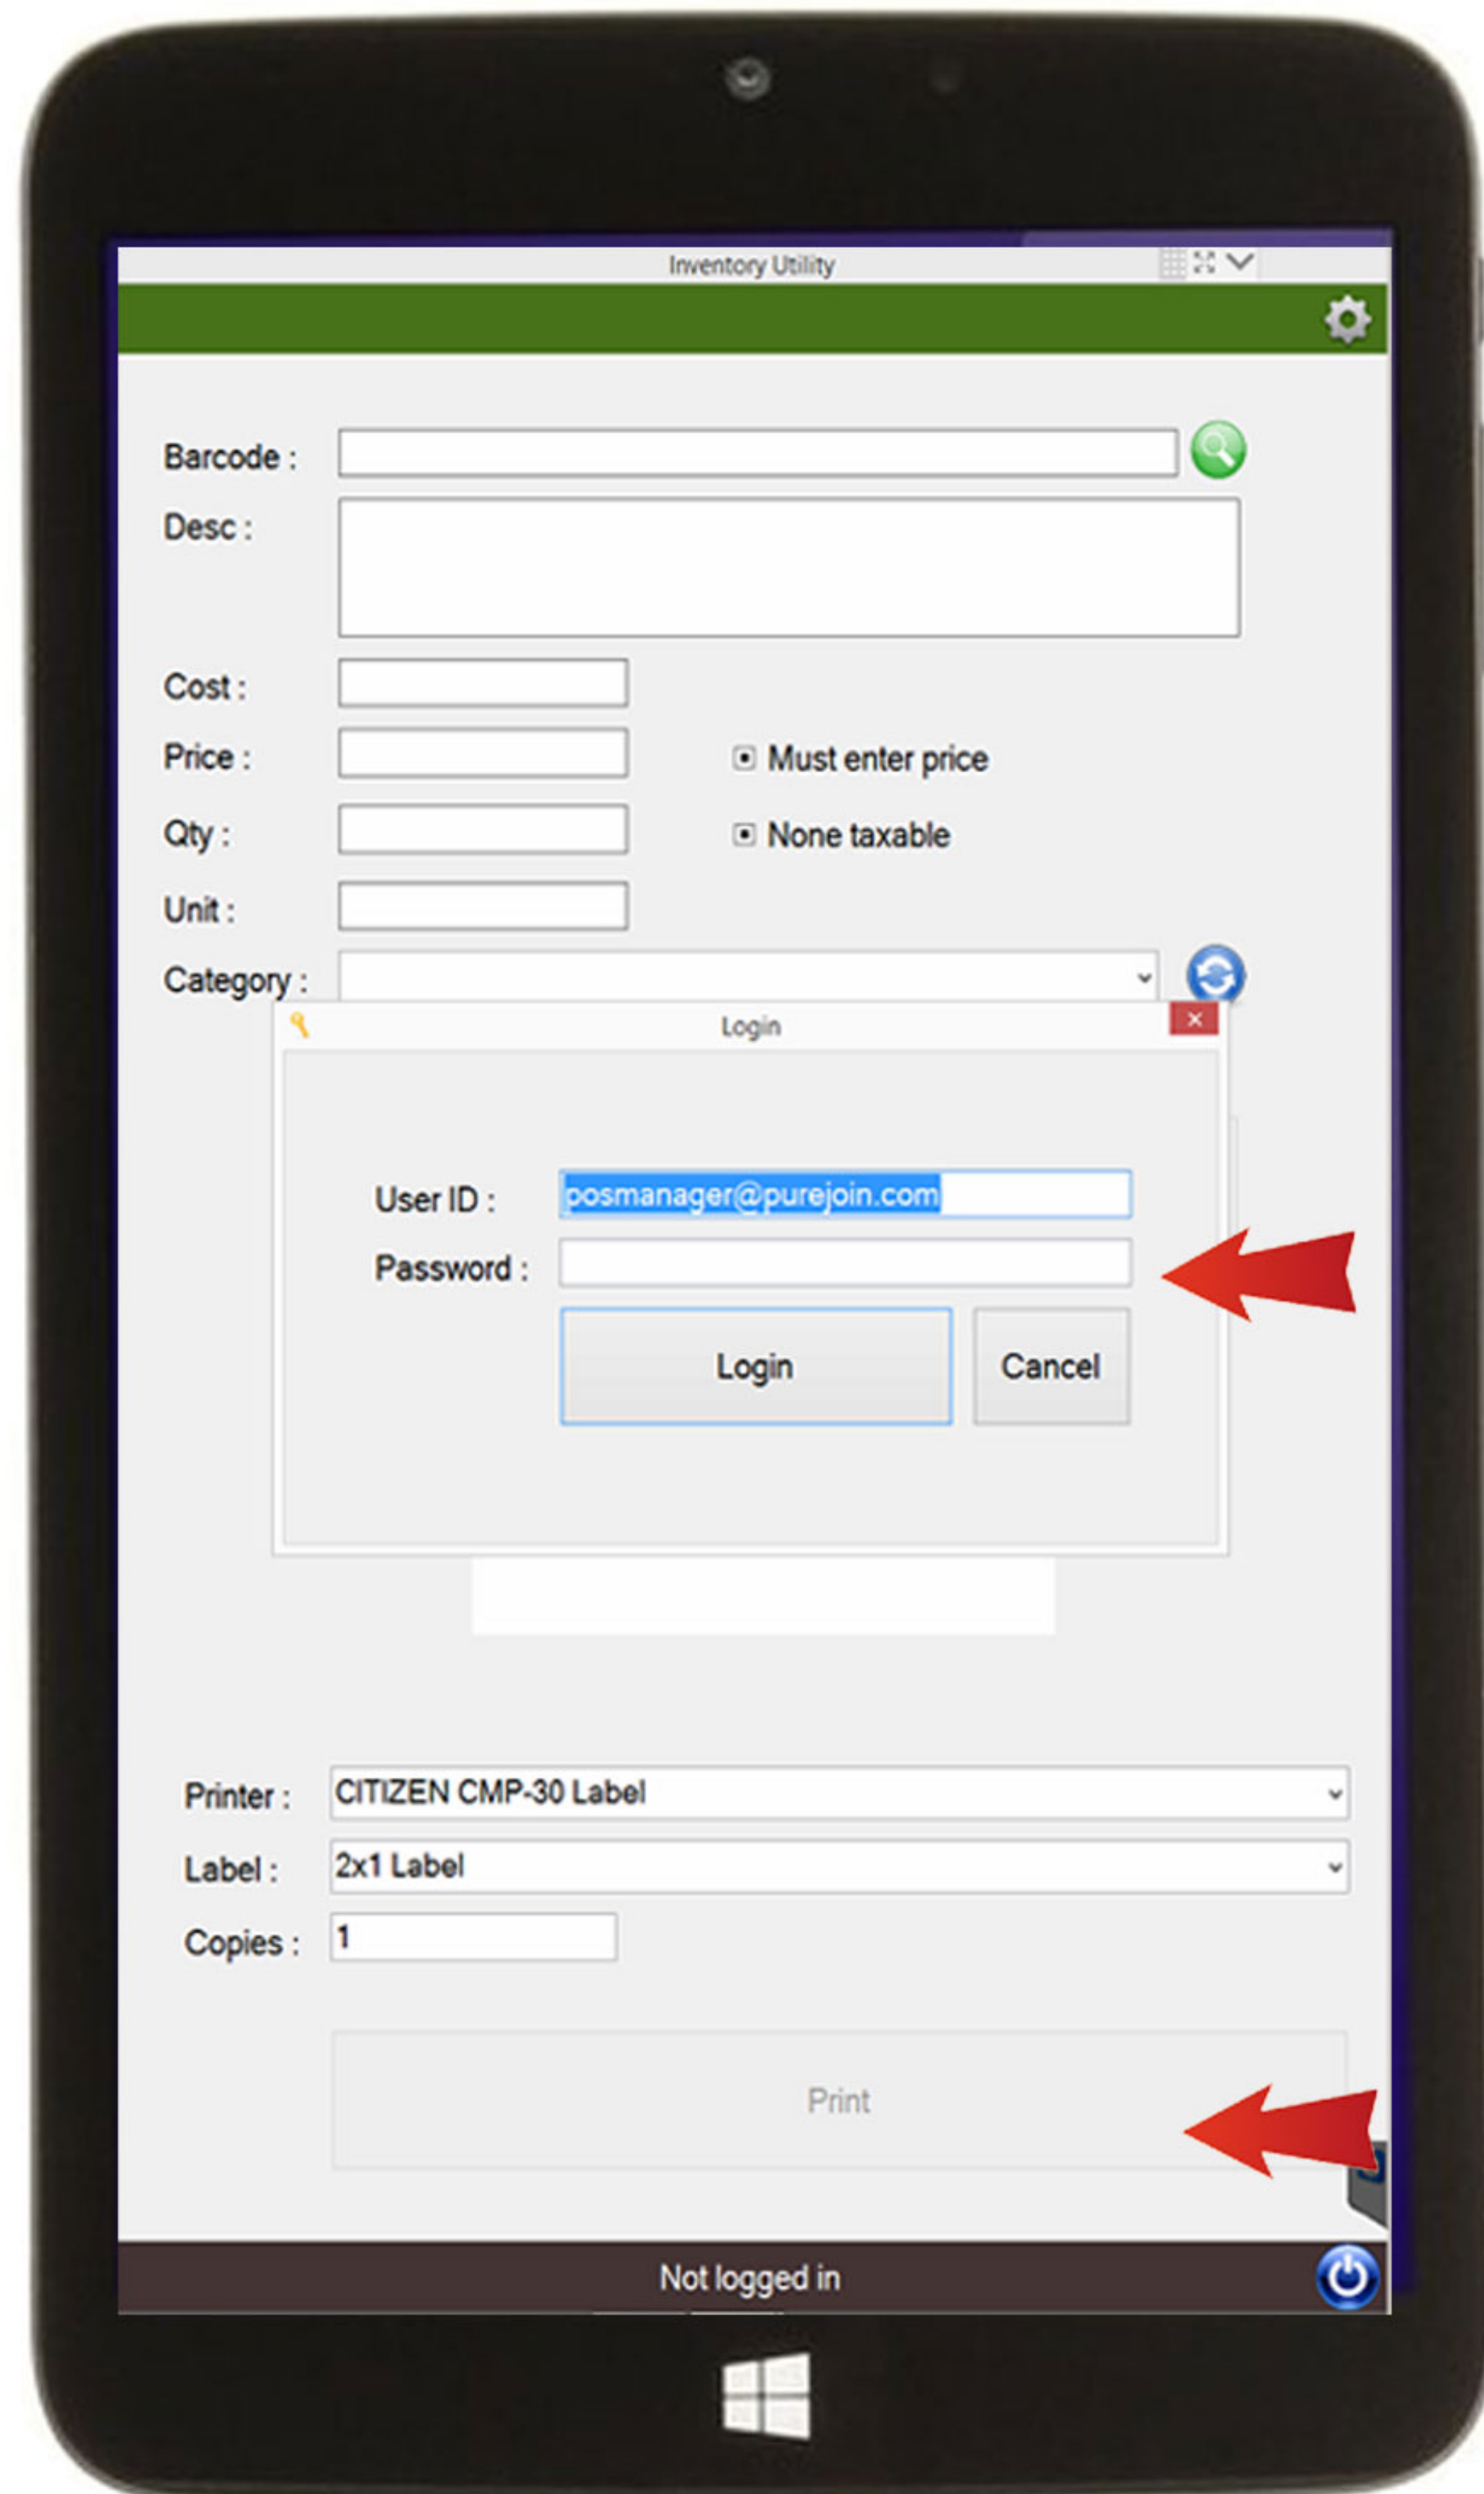

Power

Volume

Log In With Your Credential

Print Label

## Troubleshooting

- \* If label is not printing,  
Go to bluetooth setting, turn off bluetooth and turn it back on. restart lable printer
- \* Calibrating Printer  
Turn off printer  
Press & hold Feed and Press & hold Power util it starts printing.  
Keep Press & hold Feed button  
When message (Press Feed Button to reset....), is printed, release Feed button and press & hold feed button until it finish



PureJOIN Inc.,  
678)206-0500  
help@purejoin.com  
5950 Live Oak Pkwy. Ste. 175  
Norcross GA 30093