



How to Disable Manual Entry on Pax S300

1. Press [F + 1] together
2. Enter password TODAY's DATE format MMDDYYYY
3. Press [2] for Merchant Settings
4. Press [2] for Security Settings
5. Enter password TODAY's DATE format MMDDYYYY
6. Press [3] for Card manual Entry
7. Press [1] for all EDC types
8. Enter password TODAY's DATE format MMDDYYYY
9. Press [1] for Disabled